

ARC 4 SWITCHING JACKET WITH PYRAD® TECHNOLOGY BY GORE-TEX LABS

9505M & 9505F

PRODUCT DESCRIPTION

This revolutionary jacket delivers 40 cal/cm² Arc Flash protection in a lightweight, single-layer design. Unlike traditional bulky arc protection garments, the ProGARM® Arc 4 Switching Jacket is crafted to enhance freedom of movement without compromising safety. The soft-for-bending material allows wearers to perform their tasks with greater agility, minimising muscular fatigue even during physically demanding activities.

PRODUCT DETAILS

FITS: Male & Female
MALE SIZES: S-5XL (9505M)
FEMALE SIZES: 6-24 (9505F)
COLOUR: Grey

MATCHING PRODUCTS

DUNGAREE:
9515M & 9515F


HOOD:
9501 - One size



BOX TEST ARC RATING



EN STANDARDS

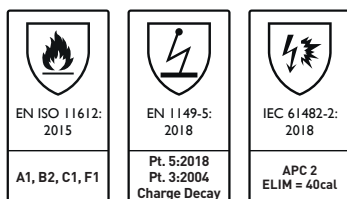

ARC 4 SWITCHING JACKET WITH PYRAD® TECHNOLOGY BY GORE-TEX LABS

9505M & 9505F

FEATURES & BENEFITS

- ✓ Shaped high collar for extra neck protection
- ✓ Chest suitable for profiling and customer logos
- ✓ FR Spiral zip for increase strength
- ✓ SafetyICON with ELIM rating
- ✓ FR HEX Heat applied reflective tape for added visibility
- ✓ Adjustable cuff tabs
- ✓ Internal zipped napoleon pocket
- ✓ Storm flap for windproofing
- ✓ Lightweight GORE-TEX® fabric technology

PRODUCT INFORMATION

FABRIC SPECIFICATION:

Weight: 320gms
Pyrad® Technology
by GORE-TEX Labs



PRODUCT CARE:

- ✓ Washing Temperature: 60°C
- ✓ Drying Temperature: up to 60°C exhaust
- ✓ Do not iron
- ✓ Do not dry clean
- ✓ Do not use bleach



Lightweight GORE-TEX® fabric technology



More comfortable during high-intensity activities



Increased ease of motion with less muscular fatigue



ARC RATED PROTECTION



BREATHABLE



LIGHTWEIGHT



COMFORT FIT



THERMSAFE™



**LIFETIME SEAM
GUARANTEE**

ARC 4 SWITCHING JACKET

WEARER FIT GUIDE - MALE

BODY MEASUREMENTS

SIZE	CHEST (cm / Inches)
Small	95-103cm / 37-40"
Medium	103-111cm / 40-43"
Large	111-119cm / 43-46"
X-Large	119-127cm / 46-50"
2X-Large	127-135cm / 50-53"
3X-Large	135-143cm / 53-56"
4X- Large	143-151cm / 56-59"
5X-Large	151-159cm / 59-62"

MEASURING GUIDE

Measurements must be taken wearing clothing usually worn underneath waterproof outerwear.
The tape measure should be fairly loose and not pulled too tight.

- ✓ **CHEST** - measure under the arms at the fullest part around the chest horizontally with arms by your side
- ✓ **WAIST** - measure around the natural waistline at the fullest part
- ✓ **SEAT** - with the feet together measure around fullest part of the hips
- ✓ **HEIGHT** - with bare feet together measure from the top of the head to the floor
- ✓ **INSIDE LEG** - in bare feet take the measurement from the top of the inside leg and measure down the inside leg to the floor


Once measurements are taken compare them to the fit guide measurement tables to find your Jacket and Trousler size.

When fitting the Trousler if the waist and seat measurements fall into different size categories then choose the larger size to ensure the trouser is not too close fitting.

If the height and inside leg measurements fall into different length categories then choose the jacket length based on the height measurement and the trouser length based on the inside leg measurement.

**These styles are historically perceived as MALE but can be worn by any person who's body measurements fit into the above tables.*

***Please note when using the measurement tables that all manufacturing tolerances and standard garment over-measures have been taken into account. This ensures any slight variances in manufacture or fabric shrinkage after washing will not affect the fit of the garments.*

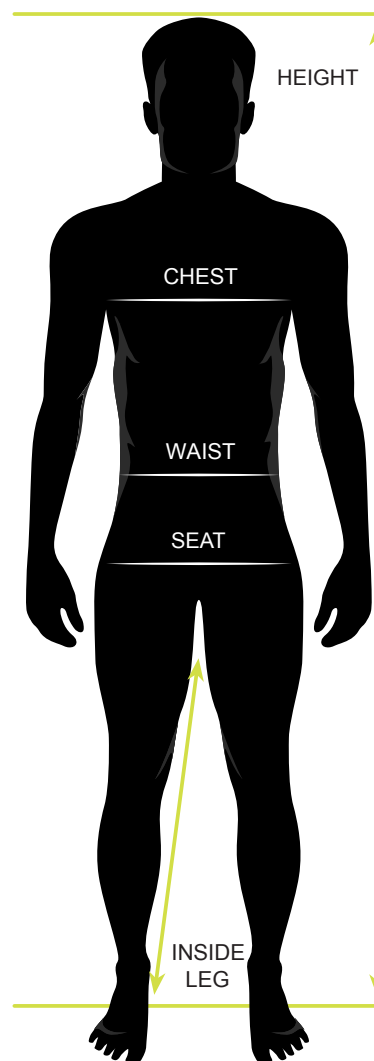

ARC 4 SWITCHING JACKET

WEARER FIT GUIDE - FEMALE

BODY MEASUREMENTS

SIZE	BUST (cm / Inches)		WAIST (cm / Inches)		HIP (cm / Inches)	
6	82-90cm	32-35"	68-76cm	27-30"	86-94cm	34-37"
8	90-98cm	35-38"	76-84cm	30-33"	94-102cm	37-40"
10	98-106cm	38-42"	84-92cm	33-36"	102-110cm	40-43"
12	106-114cm	42-45"	92-100cm	36-39"	110-118cm	43-46"
14	114-122cm	45-48"	100-108cm	39-42"	118-126cm	46-50"
16	122-130cm	48-51"	108-116cm	42-45"	126-134cm	50-53"
18	130-138cm	51-54"	116-124cm	45-49"	134-142cm	53-56"
20	138-146cm	54-58"	124-132cm	49-52"	142-150cm	56-59"
22	146-154cm	58-61"	132-140cm	52-55"	150-158cm	59-62"
24	154-162cm	61-64"	140-148cm	55-58"	158-166cm	62-65"

MEASURING GUIDE

Measurements must be taken wearing clothing usually worn underneath waterproof outerwear. The tape measure should be fairly loose and not pulled too tight.

- ✓ **BUST** - measure under the arms at the fullest part around the bust horizontally with arms by your side
- ✓ **WAIST** - measure around the natural waistline at the fullest part
- ✓ **HIP** - with the feet together measure around fullest part of the hips
- ✓ **HEIGHT** - with bare feet together measure from the top of the head to the floor
- ✓ **INSIDE LEG** - in bare feet take the measurement from the top of the inside leg and measure down the inside leg to the floor

Once measurements are taken compare them to the fit guide measurement tables to find your Jacket and Trouser size.

When fitting the Trouser if the waist and seat measurements fall into different size categories then choose the larger size to ensure the trouser is not too close fitting.

If the height and inside leg measurements fall into different length categories then choose the jacket length based on the height measurement and the trouser length based on the inside leg measurement.

**These styles are historically perceived as FEMALE but can be worn by any person who's body measurements fit into the above tables.*

***Please note when using the measurement tables that all manufacturing tolerances and standard garment over-measures have been taken into account. This ensures any slight variances in manufacture or fabric shrinkage after washing will not affect the fit of the garments.*

