



Please read this user guide before attempting to set up your Utility/ Storage Tent. Follow the user guide carefully and keep for future reference.

A copy of the user guide is also available on our website www.maypoleltd.com



WARNING – GENERAL SAFETY

Not to be used in strong winds and extreme weather conditions.

CARE OF YOUR UTILITY/ STORAGE TENT

- Allow material to dry completely before storing in the storage bag provided.
- Remove dirt with a soft sponge and warm water. DO NOT use detergent.
- DO NOT expose to sparks, flames or other sources of ignition.
- NOTE during certain conditions moisture maybe visible on the inside of the material. This is the natural build up of condensation and should not be mistaken for leaking.

CONTENTS

Utility/Storage tent x 1

Steel legs x 4

Fibreglass roof poles x 2

Steel pegs x 12

Guy ropes x 4

Carry bag x 1

BEFORE USE

Choose a clear site that is flat. Remove any sharp objects from the pitching area which could be dangerous or potentially damage the fabric.



PITCHING INSTRUCTIONS

Remove the tent from the carry bag and place flat on the ground.

Pre-assemble the 4 steel legs and 2 fibreglass roof poles.

Insert each fibreglass roof pole into both roof sleeves:



Insert one end of the fibreglass roof pole into each corner plastic socket. Form a cross shape with the fibreglass roof poles as shown below:







Insert each steel leg into the opposite end of the corner plastic socket. Attach both plastic clips to each steel leg:





Insert the metal pin ring into the base of each steel leg:



Peg down each steel leg at the base and all pegging points found on each side.



Once in position; peg down the guy ropes found on each top corner and fully tension. It is recommended each peg is driven fully into the ground at an angle of 45 Degrees away from the pegging point

The tent should now support itself.



52.00e

Technical Manager Maypole Ltd Nov 2021