

PULSE



Handheld Megaphone

Models: MP20 10W

MP50 25W with Siren

MP50X 25W with Siren and Microphone

Please read these instructions carefully before use and retain for future reference.

IMPORTANT SAFETY INFORMATION

- Only use this device for its intended purpose. Using in an unauthorised way or modifying in any way will void any warranty.
- Children shall not play with this appliance.
- Keep this device out of direct rain or moisture.
- Never point this device directly towards people or animals at close range as this may cause permanent ear damage.
- Cleaning and maintenance shall not be made by children without supervision.
- Replace the batteries when the volume output is reduced noticeably.
- When the batteries require changing, release the latch and open the rear cover to reveal the batteries. Remove the old batteries and replace using the same type.
- Always replace all the batteries at the same time noting the correct polarity.
- Never dispose of used batteries in a fire.

OPERATION

- Hold the megaphone by the hand grip and pull the talk trigger button with your finger.
- Speak into the rear microphone.
- Adjust the speech volume as required with your thumb using the rotary control on the rear of the handle grip.
- Release the trigger button when you have finished speaking.
- For models equipped with a siren, slide the switch on the left side of the hand grip to the ON position and then pull the talk trigger.
- Adjust the siren volume as required with your thumb using the rotary control on the rear of the handle grip.
- The wrist strap can be clipped to the hand grip to act as a security against accidentally dropping the megaphone.

MP50X model only

- A shoulder strap is supplied which can be clipped to the wire loops on the horn and rear casing.
- For use with the remote microphone, connect the plug to the socket on the casing.
- Slide up the TALK button on the RH side of the microphone and speak into the remote microphone.
- Adjust the speech volume as required with your thumb using the rotary control below the talk button.
When not in use hang the microphone on the hook on the rear of the casing.
- A 12VDC car power adaptor is supplied which can be connected to the input jack on the bottom of the case behind the hand grip.

MAINTENANCE

- Use a soft cloth to wipe off any dust. If the unit is very dirty, use a damp cloth and wipe dry.
- Do not use any chemicals, abrasives or solvents that could damage the casing.

TECHNICAL SPECIFICATION

Model	MP20	MP50	MP50X
Rated Power	10W	25W	25W
Power Supply	4 x 1.5V D Batteries	8 x 1.5V D Batteries 12VDC PSU (N/Inc)	8 x 1.5V D Batteries 12VDC car adaptor
Weight	490g	1230g	1360g



INFORMATION ON WASTE DISPOSAL FOR CONSUMERS OF ELECTRICAL & ELECTRONIC EQUIPMENT.

When this product has reached the end of its life it must be treated as Waste Electrical & Electronic Equipment (WEEE). Any WEEE marked products must not be mixed with general household waste, but kept separate for the treatment, recovery and recycling of the materials used. Contact your local authority for details of recycling schemes in your area.

Made in China