










User guide - Condensate drain dye




User guide - 250ml bottle.

Squirt 25ml of dye directly into the condensate pan and wash down with 5 litres of clean water.

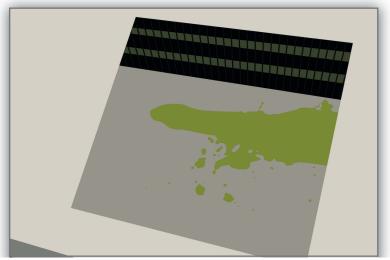

Or, add 25ml to a bucket of water and pour slowly into the condensate pan.

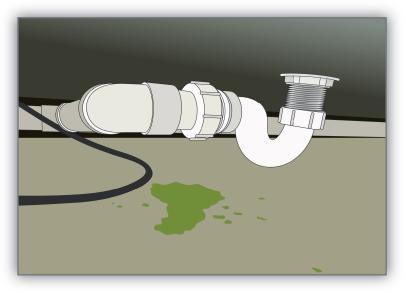

The green dye will quickly identify leaks, the dye is UV sensitive and can be used in conjunction with UV light to locate the smallest of leaks.