


Product Information and Assembly Instructions - 'No Tool' Circuit Breaker Lockout CB16

To install:

1. Put the circuit breaker handle to the off position
2. Place the lockout over the handle
3. Tighten the set screw by hand
4. Rotate the toggle
5. Apply a tag and padlock

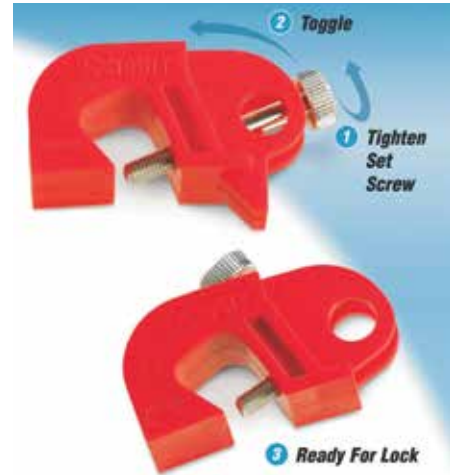

1 Tighten set screw




2 Rotate toggle




3 Lockout/Tagout


Product Information and Assembly Instructions - Grub Screw Circuit Breaker Lockout CB16A

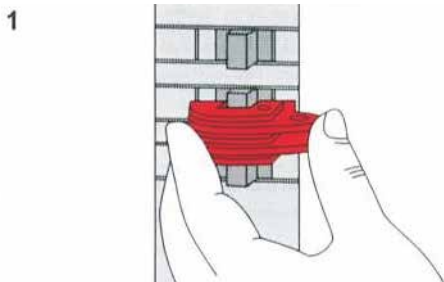

1. Turn switch to off position and place lockout device over switch.

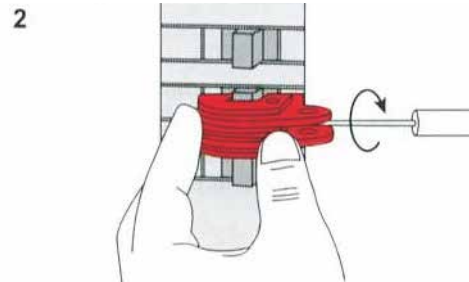

2. Tighten set screw securely with a screwdriver

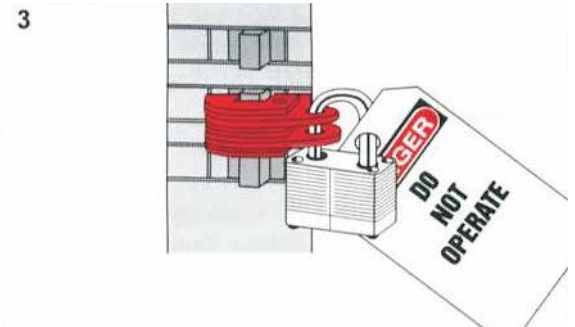

3. Attach padlock and tag, verify that the lockout device is secure in a safe or off position.