

## HOW TO FIND THE RIGHT SIZE

Ensure tape measure is tight against skin

### A. CHEST


Measure the circumference around the fullest part of your chest and under the arms.

### B. WAIST

Measure the circumference around your natural waist (smallest part of the waist).

### C. INSIDE LEG

Measure from the inside leg at the crotch to where the trouser hem is to sit on the shoe.

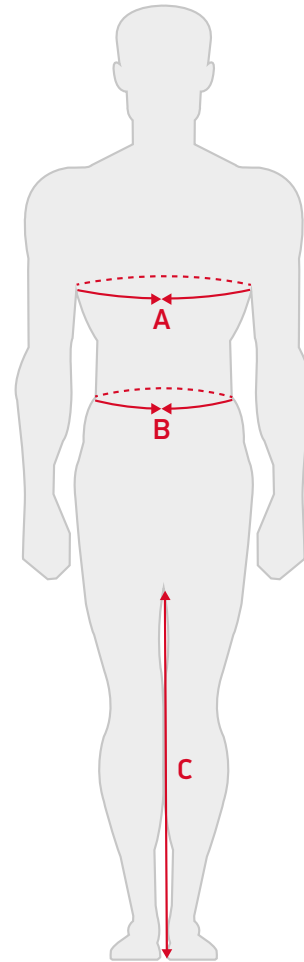

## CLOTHING SIZE CHART

Size	Size EU	A Chest	B Waist	C Inseam
<b>S</b>	42 - 44	105 cm	78 - 82 cm	80 cm
<b>M</b>	46 - 48	111 cm	83 - 87 cm	81 cm
<b>L</b>	50 - 52	117 cm	88 - 92 cm	82 cm
<b>XL</b>	54 - 56	123 cm	93 - 97 cm	83 cm
<b>2XL</b>	58 - 60	129 cm	98 - 102 cm	84 cm
<b>3XL</b>	62 - 64	135 cm	103 - 107 cm	84 cm

### KWF CERTIFIED

Independent test institute in Germany.

Many Oregon PPE products carry the KWF Standard or KWF-Profi label. KWF is a renowned independent entity in Germany that provides advice and support to key players in the Forestry sector. KWF tests and certifies tools and protective equipment and grants the right to print the KWF Standard or FPA logos on products as an indicator of superior quality.

