

# GRIPPS®

## GRIPPS Technical Specification Sheet:

### GRIPPS® Gripp Shrink

Models: H03000, H03001, H03002, H03005



**H03000**  
Gripp Shrink  
20mm x 50mm | 0.79" x 1.97"  
Quantity: 25pcs

**H03002**  
Gripp Shrink  
40mm x 50mm | 1.57" x 1.97"  
Quantity: 25pcs

**H03001**  
Gripp Shrink  
25mm x 50mm | 0.98" x 1.97"  
Quantity: 25pcs

**H03005**  
Gripp Shrink  
75mm x 100mm | 2.95" x 3.94"  
Quantity: 10pcs

## GRIPPS® Gripp Shrink

### SAFETY INFORMATION

**⚠️ WARNING** Before using the GRIPPS® Gripp Shrink, read all provided safety information pertaining to the use of your Dropped Tool Prevention (DTP) device. **FAILURE TO DO SO COULD RESULT IN INJURY OR DEATH.**

The user of a DTP device bears the responsibility of reading all safety information contained herein. Keep this manual for future reference.

#### Intended Use:

When used properly, the GRIPPS® Gripp Shrink can prevent workplace hazards resulting from dropped tools. These may include personal injury and material damage.

GRIPPS® does not approve use of this device for any activities not described in the User Instructions. This device is not intended to be used in any recreational activity, as a personal fall-arrest device or in any other manner not described herein.

**⚠️ WARNING** Misuse of this device could result in serious injury or death.

Adhere to all manufacturer recommendations regarding the operation and maintenance of this device. For additional information, contact GRIPPS® customer support.

Read and adhere to the following in order to ensure correct operational functionality:

- Your DTP should never be used as a personal fall-arrest device or restraint system.
- Do not use this device with tools that exceed the specified maximum load/weight.
- A DTP device used in applications that exceed the limits of operation specified by the manufacturer should be considered unsafe and should be replaced.
- Do not tether a tool over 2.5kg/5.5lbs directly to your clothing or person.
- Inspect your DTP device before each use.
- Ensure the DTP device is securely connected to a load rated tool connector or anchor point before use.
- Inspect any tool connector point before it is connected to the DTP device.
- Modification of the DTP device voids all warranties and violates manufacturer recommendations.
- Do not use a tool that cannot be connected to your DTP in the manner specified by GRIPPS®.
- It is unsafe to extend the length of the DTP product by any means.
- Do not use this product if it will create an unsafe working environment.
- Use extra precaution around moving machinery, moving parts, electrical hazards, extreme temperatures, chemical hazards, or combustion hazards.
- Avoid contact between any connected tethers and rough or sharp edges.
- Regularly inspect the Gripp Shrink & connected tethers to ensure it is free from any dust, grime or debris.
- All connected tools and equipment, including connection points, must be compatible for use with this DTP device.

- Always wear appropriate personal protective equipment.
- If a tether has arrested a dropped tool or object, it should be taken out of service and replaced.
- All procedures shown in this instruction are for GRIPPS® Little Gripper Kit products only.


### GENERAL USE AND CARE

After using V-Gripp Tape and Tool Catch's to create an attachment point, Gripp Shrink can be used to create an even stronger connection that is extremely resistant to abrasive and harsh environments.


#### Before Use:

Thoroughly inspect your GRIPPS® DTP device before each use. Do not use any component that presents deformities or deterioration.


### HOW TO USE / INSTRUCTIONS:

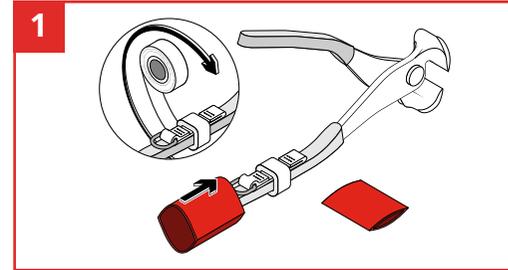

Slide Gripp Shrink over Tool Catch and V-Gripp Tape, ensuring that the D-ring is left exposed and accessible.

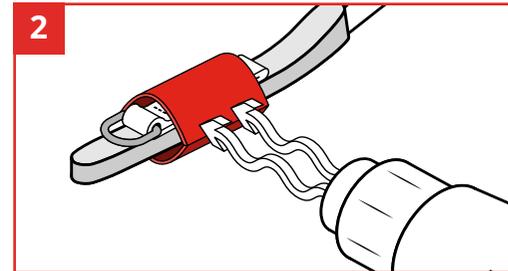

Apply a heat gun to the Gripp Shrink. This will cause Gripp Shrink to shrink in size and adhere to your Tool Catch/V-Gripp Tape. Use heat gun evenly and rotate tool continually whilst applying heat. Allow to cool.

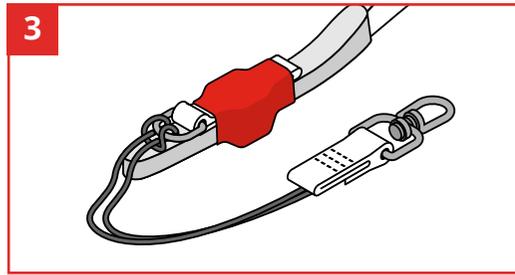

The D-Ring of your Tool Catch is now ready to be connected with a suitable GRIPPS tether or Swivel Catch.

#### After Use Care:

Clean and inspect the Gripp Shrink and any connected tethers. For tougher stains, use warm water and a mild soap or detergent. Do not use again until dry.

Store in a clean and dry environment. Proper care will help to ensure that it will operate effectively and extend its service.

# GRIPPS®