


# GRIPPS®

ANSI/ISEA  
121-2023  
COMPLIANT

## H03041K LITTLE GRIPPER KIT SIZE 2: 5.5MM - 9MM (10 PACK)



*Molded from a specialised TPU material, the GRIPPS® Little Gripper Kit provides an instant load-rated tool connection point without the need for adhesives.*

Compatible with round and polygonal-shaped shafts, the various sizes cover a massive range of tools including screwdrivers, punches and more.

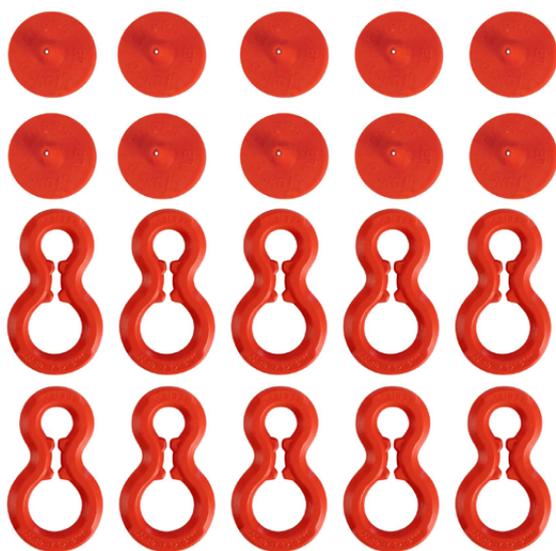

**1.1** LB **0.5** KG

MAX LOAD:

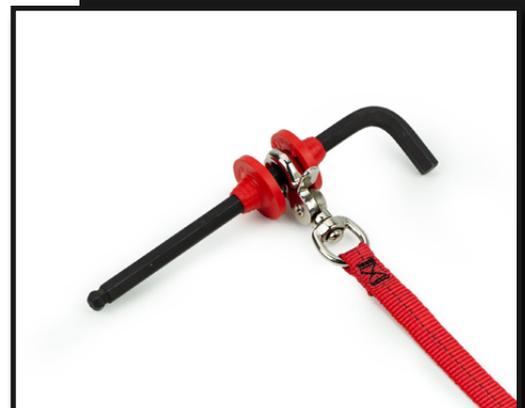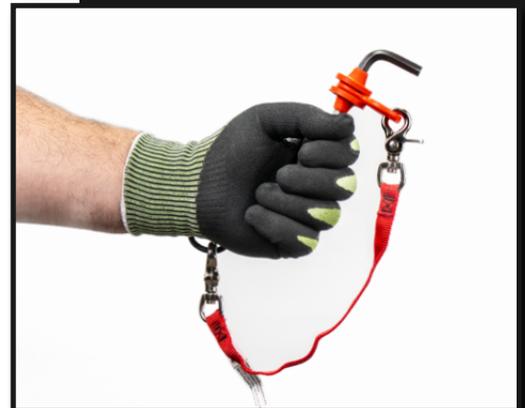

ENGINEERED FOR DROP PREVENTION

[gripps.com](https://gripps.com)

## KEY FEATURES

Simple press-fit installation onto the shaft of screwdrivers, allen keys etc.

No additional adhesives or tools required for application.



UV-protected for long-lasting outdoor use.

Compatible with tool shafts of many shapes and thickness.

## SPECIFICATIONS


SKU	MAX LOAD	MAX TETHER LENGTH	TOOL SHAFT DIAMETER	QTY
H03040K	0.5 kg   1.1 lb	0.25 m   9.84 in	10 x Size 1 Little Gripper (3.5 mm - 6.5mm   0.14 in - 0.26 in) 10 x H03047 Gripp Link	10
H03041K	0.5 kg   1.1 lb	0.25 m   9.84 in	10 x Size 2 Little Gripper (5.5 mm - 9 mm   0.22 in - 0.35 in ) 10 x H03047 Gripp Link	10
H03042K	0.5 kg   1.1 lb	0.25 m   9.84 in	10 x Size 3 Little Gripper (8 mm - 13 mm   0.31 in - 0.51 in) 10 x H03047 Gripp Link	10
H03043K	0.5 kg   1.1 lb	0.25 m   9.84 in	10 x Size 4 Little Gripper (12 mm - 16 mm   0.5 in - 0.63 in) 10 x H03047 Gripp Link	10

1




Apply little gripper to tool using appropriate size.

2

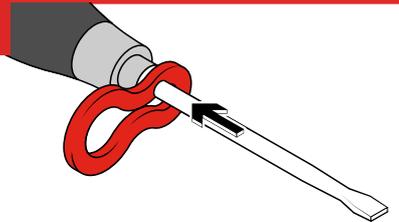


Apply the GRIPPLink to the tool shaft. Where possible, insert tool through the smallest end of Gripplink.

3

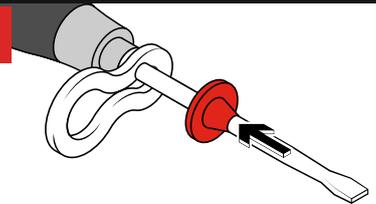


Apply the Little Gripper to your tool, ensuring a snug fit.

4

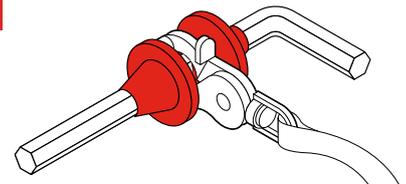

Two Little Grippers may be used without a GrippLink when using GRIPPS® H01067 tether.

5

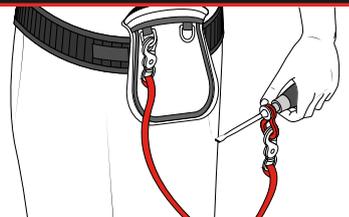

Connect a tether up to 25cm in length to the GrippLink.

@GRIPPSGLOBAL



#ConquerGravity